 




INSTRUCTION MANUAL

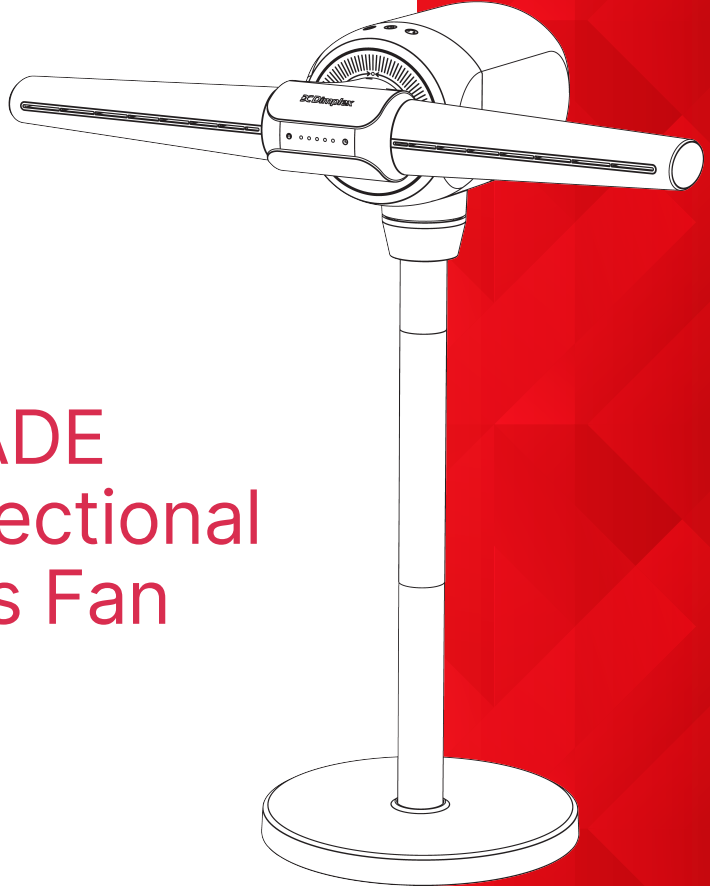

FLEXBLADE Multi-Directional Bladeless Fan

Model: DXACF002



For domestic household use only.



This product complies with all the required European and UK Product Safety, Electromagnetic Compatibility and Environmental Standards. They are fully compliant with the LVD, EMC, RoHS and Eco Design Directives and Regulations.

IMPORTANT SAFETY ADVICE



IMPORTANT: THESE INSTRUCTIONS SHOULD BE READ CAREFULLY BEFORE USE AND RETAINED FOR FUTURE REFERENCE

Personal Injury, Fire, Electric Shock, and Child Safety Risks

WARNING: To reduce the risk of fire, electric shock, or injury, follow all instructions.

WARNING: To avoid danger of suffocation please remove all packaging materials particularly plastic and EPS and keep these away from vulnerable people, children and babies.

WARNING: To avoid the risk of accidental strangulation from the power adapter all children and vulnerable people must be supervised when in the vicinity of the product whether it is working or not.

WARNING: To reduce the risk of electric shock, fire, or personal injury, always switched off and disconnect the appliance from the power supply before relocating, servicing, or cleaning.

WARNING: To reduce risk of fire or electric shock, do not use this fan with any solid-state speed control device.

WARNING: Keep the cord out of heavy traffic areas to avoid fire hazard.

WARNING: The remote control for this unit contains a small battery. To avoid risk of choking, keep this remote away from children and do not swallow the battery. If the battery is swallowed seek medical advice immediately.

WARNING

INGESTION HAZARD: This product contains a button cell or coin battery.

DEATH or serious injury can occur if ingested.

A swallowed button cell or coin battery can cause **INTERNAL CHEMICAL BURNS** in as little as 2 hours.

KEEP new and used batteries **OUT OF REACH of CHILDREN.**

Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.



Electrical Safety and Intended Use

IMPORTANT: To reduce the risk of electric shock, the plug is intended to fit in a standard polarized 13-Amp socket outlet, only plug the appliance directly into a proper electrical outlet.

IMPORTANT: This product must only be operated using the power adapter supplied with the unit. Do not connect the product directly to the mains electricity supply. Doing so may result in serious injury or damage. If the power adapter becomes damaged or requires replacement, discontinue use immediately and contact Customer Services to obtain an approved replacement adapter.

IMPORTANT: Use the appliances only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.

Child Use and Supervision Requirements

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

Children of less than 3 years should be kept away unless continuously supervised.

Children aged from 3 years, and less than 8 years shall only switch on/off the appliance if it has been placed or installed in its intended normal operating position, and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.

Children aged from 3 years, and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

Electrical Hazards and Improper Use

DO NOT use extension cords or multi-socket adapters, as these may overheat and pose a fire hazard.

DO NOT use this appliance connected through an extension lead or any external switching device such as a plug-in timer or remote-control plug-in adaptor.

DO NOT operate this appliance on the same circuit as other high-wattage devices.

DO NOT operate any appliance with a damaged cord or plug, if motor fan fails to rotate, after the appliance malfunctions, or it has been dropped or damaged in any manner. Contact Customer Care Centre for assistance.

DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your guarantee. The inside of the unit contains no user serviceable parts. All servicing and product repairs should only be undertaken by the manufacturer or by their approved service agent.

DO NOT cover cord with carpeting, throw rugs, runners, or similar coverings and **DO NOT** route cord under furniture or appliances.

DO NOT immerse in water or other liquids or use near water to protect against electrical hazards.

Operational Hazards and Misuse

DO NOT cover or obstruct the air inlet and outlet openings in any way.

DO NOT place anything on top of unit.

DO NOT use for drying textiles. This appliance is not intended for drying clothes or other fabric items.

NEVER drop or insert objects into any openings.

DO NOT use the appliance near petrol, paints, flammable gases, or vapours.

DO NOT operate the appliance in areas with excessive humidity, steam, or condensation, such as laundry rooms or enclosed bathrooms.

DO NOT use outdoors.

DO NOT use any abrasive cleaners or solvents, as this will damage the appliance.

DO NOT use this appliance until the base is properly assembled and it is standing upright supported on and by its base only.

Safe Operation and Placement

ENSURE a minimum clearance of 50 cm is maintained on all sides of the appliance to allow for adequate airflow and safe operation.

During use, keep curtains, loose fabrics, and other objects away from the air inlet and outlet to prevent obstruction or accidental intake by the fan mechanism.

NEVER put the cord near heat sources such as a radiators, stoves, or heaters.

Cord and Plug Handling

The socket-outlet must always be accessible to enable the mains plug to be disconnected as quickly as possible.

 
Be sure to pull by the plug and not the cord when un-plugging the appliance.

The supply cord should be uncoiled before use.

This instruction leaflet belongs to the appliance and must be kept in a safe place. If changing owners, the leaflet must be surrendered to the new owner.

PRODUCT PARTS

Motor Head

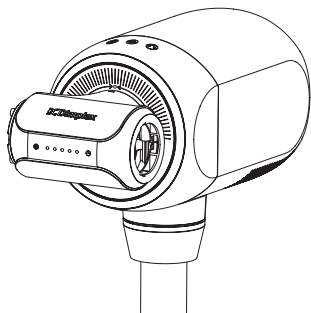


Lower Pole




Upper Pole



 
Base Plate

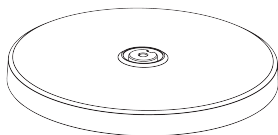


Blades x2

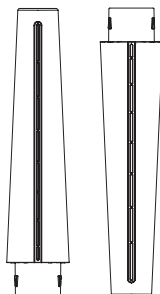 

Remote Control

 


Power Adapter

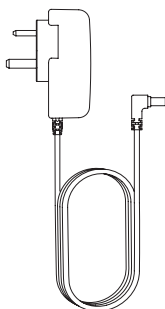 

Cord Clips x2




 Bolt, Washer & Allen Key

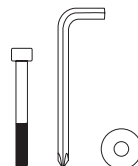

ASSEMBLY INSTRUCTIONS

 KEEP FINGERS CLEAR OF THE CONNECTION POINTS DURING ASSEMBLY

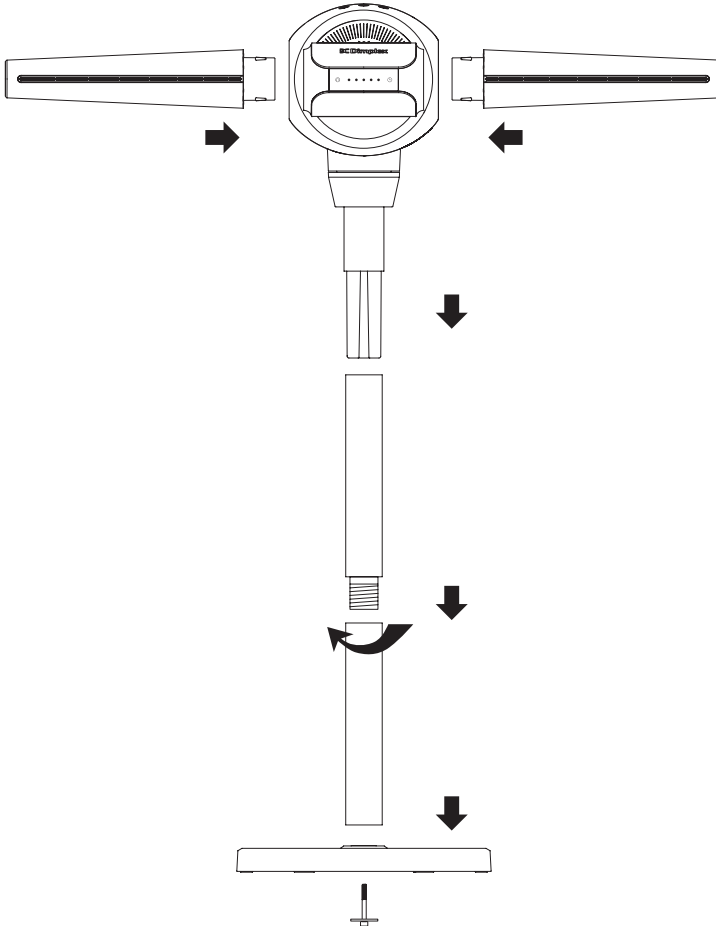


1. Base assembly:

- A Align the lower pedestal pole with the base and insert firmly until it clicks securely into place.
- B Place the washer onto the bolt, then insert the bolt into the opening at the bottom of the base. Using the supplied Allen key, turn clockwise to tighten the bolt firmly and secure the lower pole in position.
- C Attach the upper pole to the lower pole by screwing it in clockwise until secure.

2. Motor head attachment:

 - A Hold the motor head securely.
- B Align the channels on the motor head attachment with the upper pedestal pole.
- C Insert the attachment into the upper pedestal, allowing the channels to guide it into position. Press down until the release button at the rear of the attachment clicks into the hole at the top of the pedestal, confirming a secure lock. To remove the motor head, press the release button and lift the assembly upward.

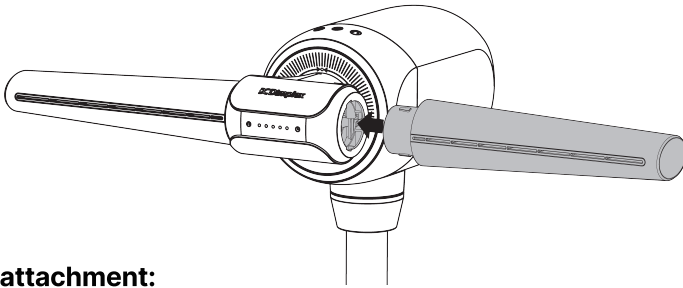


3. Blades attachment:


- A Align the blade channels with the motorhead.
- B Press the blade firmly into the motorhead until it clicks into place.
- C Repeat the process for the other blade.

4. Connecting the power adapter:

 - A Insert the power adapter connector into the power interface on the fan's main body.
- B Secure the power cord using the two provided clips to keep it firmly in place.
- C After connecting to the power adapter, a confirmation beep will indicate that the fan is powered successfully.

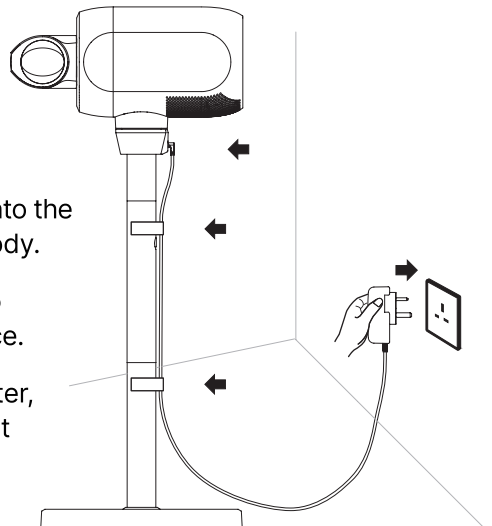

CONTROL PANEL

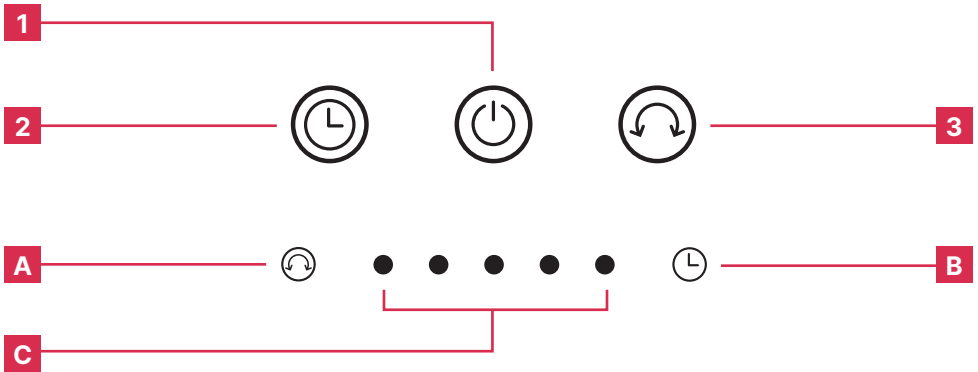 

Buttons

 
- 1 Power ON / Standby / Fan Speed Button
- 2 Timer Button
- 3 Oscillation Button

LED Indicators

- A Oscillation
- B Timer
- C Fan Speed / Timer Setting


REMOTE CONTROL

- 1 Power ON / Standby Button
- 2 Oscillation
- 3 Increase Fan Speed
- 4 Decrease Fan Speed
- 5 Boost Mode
- 6 Timer
- 7 Sleep Mode

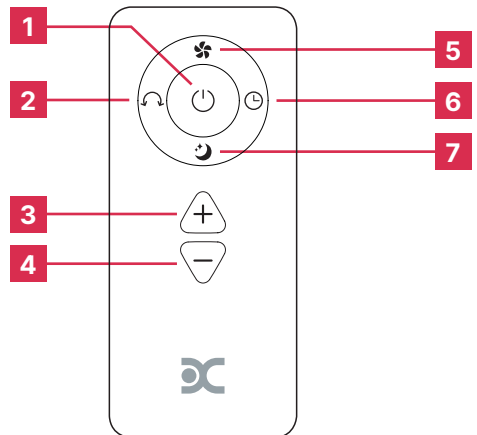

The remote comes pre-installed with a CR2025 3V battery.




 
Before first use, remove the plastic insulation tab to activate the battery.

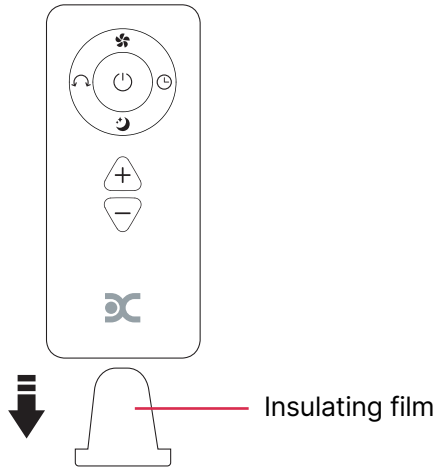


To replace the battery:

- Press the release tab on the base of the remote to disengage and remove the battery holder.
- Insert a new CR2025 battery with the “+” side facing upward.
- Carefully slide the battery holder back into the remote until it clicks into place.

    
Important: If the remote will not be used for an extended period, remove the battery to protect the holder and prevent damage.

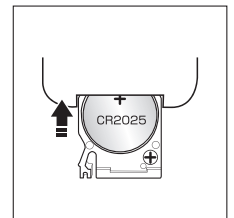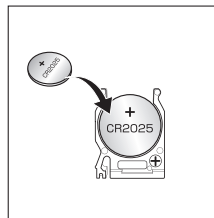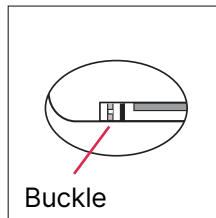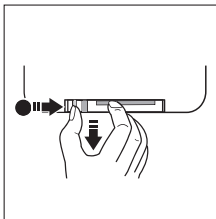

 Note: When operating the remote control, ensure it is pointed directly toward the fan's display screen for proper functionality.

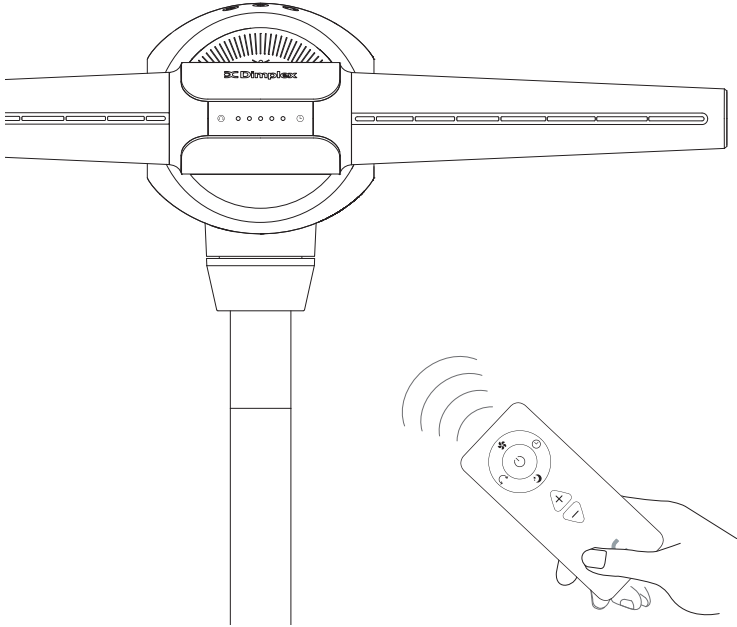

 After using the remote control, store it on top of the fan head. Both the fan head and the remote contain magnetic components, allowing the remote to attach securely.

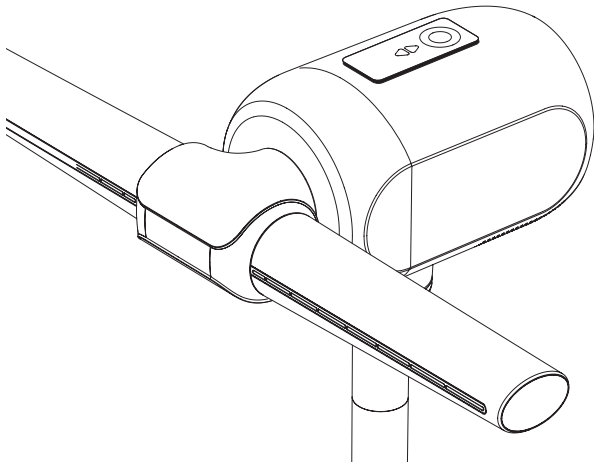

OPERATION INSTRUCTIONS



POWER BUTTON

Press and hold the power button for 1 second to turn the device on or off.

FAN SPEED

- Tap the power button on the control panel to cycle through fan speed levels (1 to 5).
- Alternatively, use the “+” or “-” buttons on the remote to adjust the speed.
- LED lights will illuminate accumulatively to indicate the selected fan speed level.



TIMER BUTTON

- Press the timer button repeatedly to cycle through the available countdown options: 2, 4, 6, 8, or 10 hours.
- The corresponding timer LED will illuminate to indicate the selected duration.
- Example: To set a 10-hour timer, press the button five times—the fifth LED will illuminate.
- If the fan is switched off manually, any previously set timer will be cancelled automatically.



BOOST MODE

- Press the boost mode button to activate maximum fan speed.
- The LED display will light up, indicating that the fan is set to speed level 5.
- The fan will run continuously at this speed until you manually adjust the settings or turn it off.



SLEEP MODE

- Press sleep mode on the remote to activate.
- The LED display will light up, indicating that the fan is set to speed level 1.
- The display light will turn off after 10 seconds and the fan runs at speed 1 continuously until manually adjusted.



OSCILLATION BUTTON

Press the oscillation button to cycle through the available angles: 30°, 60°, and 90°.

 
The indicator light  will respond as follows:

- One flash, then remains illuminated - 30° oscillation selected
- Two flashes, then remains illuminated - 60° oscillation selected
- Three flashes, then remains illuminated - 90° oscillation selected
- Press the button a fourth time to turn the indicator LED off, which disables oscillation.

MANUAL PIVOT AND TILT


1. Pivot:

Rotate the fan head clockwise or counterclockwise up to 180° to adjust its position for horizontal or vertical airflow.

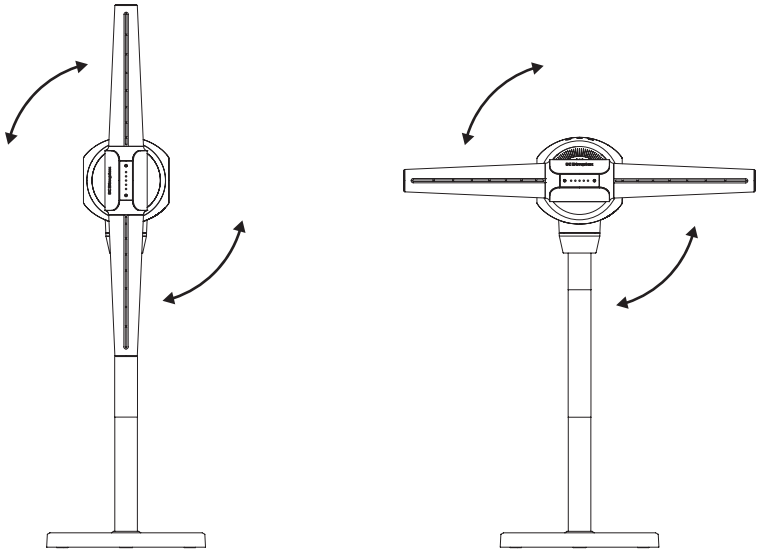

2. Tilt:

 Tilt the fan blades up or down up to 90° to personalize airflow direction.

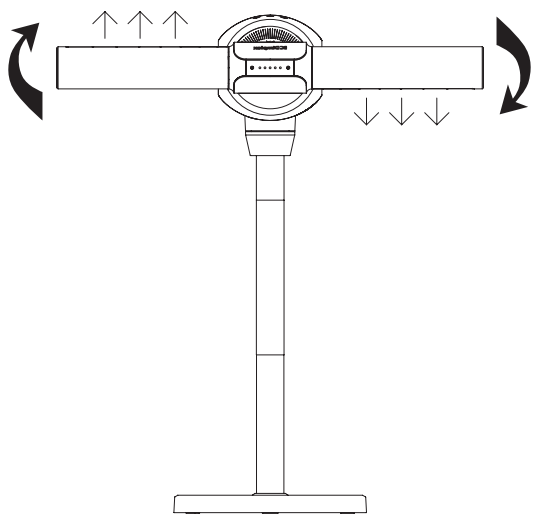

MAINTENANCE

To maintain optimal performance, clean the fan every six months or as needed. Always unplug the unit before cleaning. The most common cause of malfunction is dust or debris buildup, so regularly clean the air vents and front grille using a vacuum cleaner. Light dust can be removed with a soft cloth, and for occasional deeper cleaning, wipe the exterior surfaces with a cloth slightly moistened with a mild detergent and water solution.

DO NOT immerse the fan, power adapter or remote control in water or any other liquid.

Ensure all surfaces are thoroughly dried with a soft, dry cloth before operating the fan. When not in use, store the unit in a clean, dry location

TROUBLESHOOTING

If the product is not functioning correctly, please consult the troubleshooting guide below. If the issue persists or is not listed, kindly contact the Customer Service Centre for further assistance.

| Problem | Possible Cause | Solution |
|------------------------|---|---|
| Remote is not working. | Remote is out of range or not pointed at the LED. | Ensure the remote is aimed directly at the LED on the front of the fan. |
| | Remote battery is depleted. | Replace the remote batteries. |

 
RECYCLING



For electrical products sold within the European Community. At the end of the electrical product's useful life, it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

If you don't intend to keep the packaging of this product for later use or storage, please dispose of it in an environmentally friendly way, please dispose of it in your recycling bin or nearest recycling facility, thank you.

ADDITIONAL INFORMATION

| Model identifier(s) | | DXACF002 | |
|--|--------|--|-----------------------|
| | Symbol | Value | Unit |
| Maximum Fan Flow Rate | F | 28,40 | m ³ /min |
| Fan Power Input | P | 42,7 | W |
| Service Value | SV | 0,665 | m ³ /min/W |
| Standby Power Consumption | PSB | 0,35 | W |
| Fan Sound Power Level | LWA | 64,2 | dB(A) |
| Maximum Air Velocity | c | 2,37 | meters/sec |
| Rated Voltage | V | 24  | V |
| Measurement Standard for Service Value | | ZCP-ESH-P26011291 | |

GUARANTEE



To view the full Guarantee Terms & Conditions scan the QR code or go to <https://www.gdhv.co.uk/guarantee-terms-and-conditions>

WHAT DOES A DIMPLEX GUARANTEE COVER?

Dimplex products deliver reliable service for normal, household use in domestic settings. All Dimplex products are individually tested before leaving the factory.

If you are a consumer and you experience a problem with your Dimplex product, which is found to be defective due to faulty materials or workmanship within the Guarantee Period, this Dimplex Guarantee will cover repair or - at the discretion of Dimplex - replacement with a functionally equivalent Dimplex product.

Your product is under Guarantee for 1-year from the date of purchase or the date of delivery of the product, if later. The 1-year Guarantee is extended for an additional 2-years when you register the product with Dimplex, within 28 days of purchase. If you do not register the product with Dimplex within 28 days, your product will remain warrantied for 1-year only.

To validate your extended Guarantee, register with us online at:

<http://register.dimplex.co.uk>.

Note: Each qualifying product needs to be registered with Dimplex individually. Please note that the extended Guarantee is only available in the UK and Ireland.

The Dimplex Guarantee is conditional upon you providing the original purchase receipt as proof of purchase. Please therefore retain your receipt as proof of purchase.

If you do experience a problem with your Dimplex product, please call the Helpline on **+44 [0]344 879 3588** or visit <https://www.dimplex.co.uk/support>.

For ROI, please email serviceireland@glendimplex.com or call **+353(0)1 842 4833**.

We will need details of your Dimplex product and a description of the fault which has occurred. Once we receive your information and proof of purchase, we will contact you to make the necessary arrangements. If your Dimplex product is not covered by this Dimplex Guarantee, there may be a charge to repair your product. However, we will contact you for agreement to any charges before any chargeable service is carried out.

WHAT IS NOT COVERED BY A DIMPLEX GUARANTEE?

The Dimplex Guarantee does not cover any of the following:

Any fault or damage to your Dimplex product due to faulty materials or workmanship occurring outside the Guarantee Period. Normal wear and tear including parts that might wear out over time or consumables, such as filters, batteries, etc.

Any fault or damage occurring to any pre-owned Dimplex product or to any other equipment or property. Accidental damage to your Dimplex product or damage to your Dimplex product from external sources (for example, transit, weather, electrical outages or power surges).

Fault or damage to your Dimplex product which is:

- Not due to faulty materials or workmanship or which is due to circumstances outside Dimplex's control.
- Caused by use of your Dimplex product for anything other than normal domestic household purposes in the country where it was purchased.
- Caused by any misuse, abuse or negligent use of the Dimplex product, including but not limited to any failure to use it in accordance with the Operating Instructions supplied with the product.
- Caused by any failure to assemble, install clean and maintain your Dimplex product in accordance with the Operating Instructions supplied with the product unless this was carried out by Dimplex or its authorised dealers.
- Caused by repairs or alterations to your Dimplex product not carried out by Dimplex service personnel or its authorised dealer(s).
- Caused by use of any consumables or spare parts for your Dimplex product which are not Dimplex - specified.

TERMS AND CONDITIONS

The Dimplex Guarantee is valid for 1 calendar year, plus 2 if registered, from the date of purchase of your Dimplex product from a recognised retailer in the country of purchase and use, or the date of delivery of the product if later, always provided the original receipt has been retained and is produced as proof of purchase.

You must provide to Dimplex or its authorised agents on request the original receipt as proof of purchase and - if required by Dimplex - proof of delivery. If you are unable to provide this documentation, you will be required to pay for any repair work required.

Any repair work under the Dimplex Guarantee will be carried out by Dimplex or its authorised dealer(s) and any parts that are replaced will become the property of Dimplex. Any repairs or replacement performed under the Dimplex Guarantee will not extend the Guarantee Period.

The Dimplex Guarantee does not entitle you to recovery of any indirect or consequential loss or damage including but not limited to loss or damage to any other property.

The Dimplex Guarantee is in addition to your statutory rights as a consumer and your statutory rights are not affected by this Dimplex Guarantee.

CUSTOMER CARE CENTRE

If you are having problems with your appliance or have any questions about what the Dimplex Guarantee covers or how to claim under the Dimplex Guarantee, please contact us:

United Kingdom

Telephone: **+44 344 879 3588**

Visit: **www.dimplex.co.uk**

Glen Dimplex Heating and Ventilation,
Millbrook House,
Southampton,
Hampshire,
England,
SO30 2DF

Republic of Ireland

Telephone: **+353 1 842 4833**

Email: **serviceireland@glendimplex.com**

Glen Dimplex Ireland UC,
Airport Road,
Cloghran,
Co. Dublin
K67 DT89



© Glen Dimplex. All rights reserved. Material contained in this publication may not be reproduced in whole or in part, without prior permission in writing of Glen Dimplex.

Printed in China.