 




INSTRUCTION MANUAL

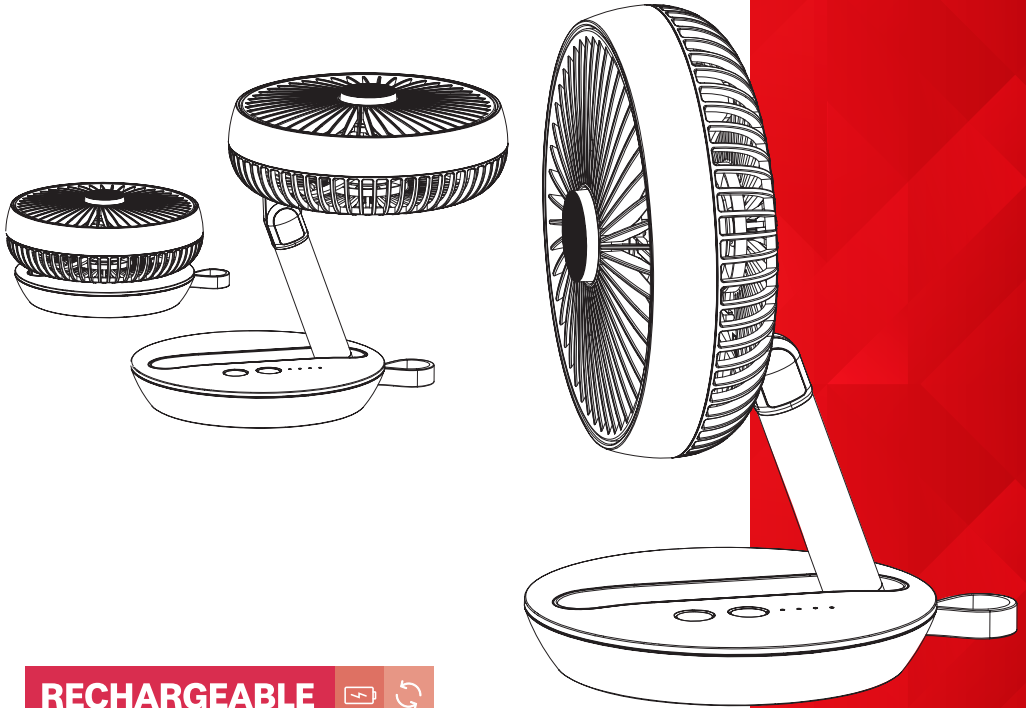

RECHARGEABLE



Desk Fan

Model: DXRCFN



This product complies with all the required European and UK Product Safety, Electromagnetic Compatibility and Environmental Standards. They are fully compliant with the LVD, EMC, RoHS and Eco Design Directives and Regulations.

Important Safety Advice

IMPORTANT: THESE INSTRUCTIONS SHOULD BE READ CAREFULLY BEFORE USE AND RETAINED FOR FUTURE REFERENCE

WARNING: To avoid danger of suffocation please remove all packaging materials particularly plastic and EPS and keep these away from vulnerable people, children and babies.

DO NOT COVER or obstruct the air inlet and outlet openings in any way.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

IMPORTANT: Place the fan on a flat, firm, safe surface before use. The fan should only be operated standing upright on its base, it is not designed for any other function/operation

WARNING: The output voltage for the battery charger for this product should not exceed 5V(2A). Check the output voltage indicated on the rating label of the charging unit carefully. Using the wrong voltage will damage the unit.

IMPORTANT: Very young children/babies should not be allowed near or within reach of the appliance, there is danger as the openings in the enclosure are not small enough to prevent small fingers getting in or caught and the area around the fan head vertical swivel point could also catch or trap fingers, please consider your child's and your safety.

DO NOT put your fingers or any other object into the grill when the fan is operating.

IMPORTANT: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge. Do not let them use the appliances without supervision by a person responsible for their safety.

IMPORTANT: Disconnect the USB cable from the charging unit when not in use and when not charging or when moving, cleaning or storing the appliance.

IMPORTANT: Make sure that the fan does not touch any obstruction when operating. Do not let hair, net curtains, materials, clothes or curtains etc. near the openings of the fan. They could get entangled and cause damage or injury.

DO NOT use this fan outside; it is for indoor use only.

DO NOT use this fan in a damp area such as a bathroom.

DO NOT use this fan in any wet area or in the area of a sink, a bath, a shower or a swimming pool.

 
 
DO NOT use this fan in direct sunlight, do not use in proximity to any heat source such as radiator, a cooker or heater, danger of damage or battery overheating.

DO NOT operate the fan in an area where gasoline, paint or other such flammable liquids are used or stocked.

DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only. This battery in this appliance can only be replaced by a professional electrician, it is not designed for user maintenance or replacement.

This instruction leaflet belongs to the appliance and must be kept in a safe place. If changing owners, the leaflet must be surrendered to the new owner.

Product Description

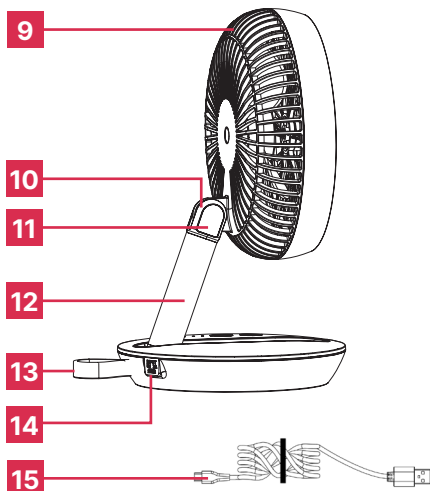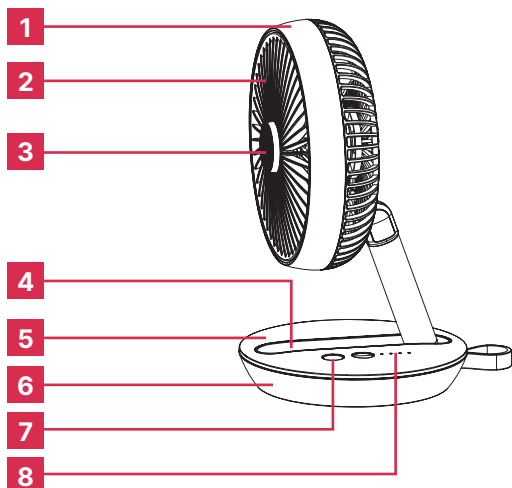

1. Front cover

2. Rotating louvers

3. Knob (Adjust louvers condition between operation or steady)

4. Staddle Groove

5. Base Upper Cover

6. Base Down Cover

7. Press Button

8. LED Light

9. Rear cover

10. Upper Rotating Joint

11. Joint Cover

 
12. Staddle

13. Handle

14. TYPE-C cable jack

15. Charging Cable

Button and LED Display Light Diagram

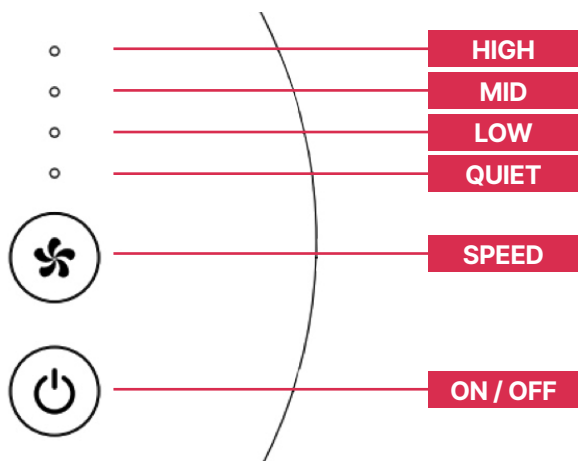

Installation & Operation Notes

1. Open the packaging and take out the product, Instruction manual and the USB cable, ensure all parts are present. Store the packaging for future use or dispose of it in a safe way, keep away from children.
2. Unit comes fully assembled.
3. You should fully charge the product before operating for the first time.
4. You can use the unit free standing without the charging cable connected once the lithium battery has been charged.
5. You can use the unit while connected to a live charging port but it should only be operated in Quiet, Low or Medium speed modes – NB – Using it when connected to a charging port in High speed mode may still discharge the battery and cause it to shut off automatically due to low power.
6. You can adjust the angle of the fan head manually in a 90° vertical motion, place one hand on the base and adjust the head with your other hand to the desired angle, it will stay at whatever angle you adjust it to.

Charging Mode

Connect the small connector of the USB cable to the USB socket on the fan and connect the large connector to a suitable (maximum) 5V charging unit (not supplied). A typical laptop or computer USB port can be used or a suitable plug adaptor – NB – please check the plug output rating to ensure it is a maximum output of 5V/2A, connecting the fan to a higher charging output will damage the unit. Please check the output rating of the charging socket before use.

When the charging unit is switched on (with the fan in off mode) the LED lights will flash to indicate the amount of power/charge in the battery as follows:

1. When the battery power detected is $\leq 25\%$, Light 1 will flash slowly on & off (interval approx.1 second).
2. When the battery power detected is between 25% and 50%, Light 1 will stay on, Light 2 will flash slowly on & off (interval approx.1 second).
3. When the battery power detected is between 50% and 75%, Light 1 & 2 will stay on, Light 3 will flash slowly on & off (interval approx.1 second).
4. When the battery power detected is between 75% and 100%, Light 1, 2 & 3 will stay on, Light 4 will flash slowly on & off (interval approx.1 second).
5. When the battery power detected is 100% (fully charged), Light 1, 2, 3 & 4 will stay on.

NB - Charging & Working Duration:

1. Charging period when the battery is fully discharged will take 7 hours using a 5V/2A adaptor to fully charge the fan.
2. Working duration unplugged is from 4 hours in High speed mode to 15 hours in Quiet speed mode.

Operation & Control

1. PRESS BUTTON

ON/OFF BUTTON

- 1) Standby Status: Press briefly on the **On/Off Button** and the fan will start operating at a quite speed.
- 2) Operation Status: Press briefly on the **On/Off Button** and the fan will stop operation

FAN SPEED BUTTON

When the machine is on, press **Fan Speed Button** to adjust the wind speed,
1 → 2 → 3 → 4 → 1 → 2 → 3 → 4 Cycle adjustment gear.

Status of indicator light for gear on panel

Gear button	Fan speed	LED lamp 1	LED lamp 2	LED lamp 3	LED lamp 4
Press 1x	Quiet	On	Off	Off	Off
Press 2x	Low	On	On	Off	Off
Press 3x	Medium	On	On	On	Off
Press 4x	High	On	On	On	On

2. FUNCTION AND DISPLAY

WORKING MODE (CHARGING OR NORMAL)

- 1 When the battery is enough to work, the LED light will be on or off according to the working condition.
- 2 When the battery is too low to work, the LED light will flash 5 times (quick flash for on/off—interval for 0.25 second per time) then turn off automatically. The LED light will flash according to the speed selection before off. For example
 1. The appliance is working in quiet speed (light 1 on), then the light 1 will flash 5 times and off.
 2. The appliance is working in low speed (light 1 & 2 on), then the light 1 & 2 will flash 5 times and off.
 3. The appliance is working in Mid speed (light 1, 2 & 3 on), then the light 1, 2 & 3 will flash 5 times and off.
 4. The appliance is working in High speed (light 1, 2, 3 & 4 on), then the light 1, 2, 3 & 4 will flash 5 times and off. If you press the button again to turn on the unit, light 1-4 will flash 5 times at the same time(quick flash for on/off—0.25 second per time), then turn off automatically (The appliance is not working, only flashing indication).
- 3 No flashing indication when charging if the appliance is on.

CHARGING MODE (OFF)

If the fan is switched off during charging, the LED lights indicate the charge level. See the table below:

Battery power	LED lamp 1	LED lamp 2	LED lamp 3	LED lamp 4
<25%	Slow blinking	Off	Off	Off
Between 25 and 49%	On	Slow blinking	Off	Off
Between 50 and 74%	On	On	Slow blinking	Off
Between 75 and 99%	On	On	On	Slow blinking
100%	On	On	On	On

CHECKING THE BATTERY POWER

By pressing the On/Off button 1.5 seconds, you can check the battery power level when the fan is switched off. The number of burning LEDs indicates the level of the remaining power.

Battery power	LED lamp 1	LED lamp 2	LED lamp 3	LED lamp 4
<25%	On	Off	Off	Off
Between 25 and 49%	On	On	Off	Off
Between 50 and 74%	On	On	On	Off

If the battery is not sufficiently charged to power the fan and you press the On/Off button, all four LEDs will blink 5 times rapidly and simultaneously and the fan will not turn on. First charge the battery of the fan.

3. CHARGING & WORKING DURATION:

- Charging interval: 4 hours to charge fully using a 5V/2A adapter While the fan is not in operation while charging.
- Operating duration: 4 hours at high speed and 15 hours at quiet speed.

4. NOTES:

- The output voltage for the battery charger should not exceed 5V.
- When the fan comes an exception caused by human behavior or exterior issues, turn off the unit quickly, or the internal controller chip will be damaged.
- Suggest keeping the unit off until the battery is full.
- After the fan automatically shuts down with low power, it will start up when charging. The charger must be 5V/2A, otherwise, the fan will not start.
- The fan is fitted with a power saving feature. Lights will turn off after 60 seconds if no control buttons are touched. Touching any button will turn the lights on.

Operational Warning Notes

1. The output voltage for the battery charger must not exceed 5V-2A, connection to a higher power output port will damage the controller.
2. If the product is damaged or the fan is prevented from rotating freely by some external interference the unit should be turned off immediately, failure to turn the unit off in such circumstances will damage the internal controller chip and probably the motor as well.
3. We recommend that the unit should be fully charged before each prolonged operation.
4. We recommend that the product should not be used in High Speed mode while connected to a charging port.

Technical Data

Model	DXRCFN
Rated Voltage	DC5V
Rated Power	5W
Noise Level	≤45dB
Product Size	L 187mm × W 170mm × H 279mm
Weight	Net Weight: 0.66Kg

Cleaning

If dust accumulates, it will affect the performance, so it is recommended to clean the fan at least once a month when in use.

1. Turn off the fan and unplug it from the USB cable.

Note: You must unplug the fan prior to cleaning, otherwise you will put yourself at risk of electric shock.

2. Clean the surface of the fan with a damp cloth, avoid direct contact with water.
3. Do not use any detergent, spray or chemicals to clean the fan, these can damage the appliance.
4. Do not immerse in liquid or expose to liquid splashes or drops.

Storage

1. When the fan is not use for an extended period of time, unplug it and store in an enclosed space to prevent dust from building up.
2. Store the fan in a dry and cool space away from heat sources.

Maintenance - Repairing the fan

This product is not designed for user maintenance of any kind.

If the appliance is not working well or it has been damaged, unplug the USB cable or turn off the unit immediately. Inform the Service Center or send the appliance to the professional person for repairing.

Recycling



For electrical products sold within the European Community.

At the end of the electrical products useful life it should not be disposed of within household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

If you don't intend to keep the packaging of this product for later use or storage, please dispose of it in an eco-friendly way, please dispose of it in your recycling bin or nearest recycling facility, thank you.



Batteries should be disposed of or recycled in accordance with WEEE Directive 2012/19/EU. Packaging should be recycled where possible.

What does a Dimplex Guarantee cover?

Dimplex products deliver reliable service for normal, household use in domestic settings. All Dimplex products are individually tested before leaving the factory.

If you are a consumer and you experience a problem with your Dimplex product, which is found to be defective due to faulty materials or workmanship within the Guarantee Period, this Dimplex Guarantee will cover repair or - at the discretion of Dimplex - replacement with a functionally equivalent Dimplex product.

Your product is under guarantee for 1 year from the date of purchase or the date of delivery of the product, if later. The 1 year guarantee is extended for an additional 2 years when you register the product with Dimplex, within 28 days of purchase. If you do not register the product with Dimplex within 28 days, your product will remain guaranteed for 1 year only. To validate your extended guarantee register with us online at: <http://register.dimplex.co.uk>.

N.B. Each qualifying product needs to be registered with Dimplex individually. Please note that the extended guarantee is only available in the UK and Ireland.

The Dimplex Guarantee is conditional upon you providing the original purchase receipt as proof of purchase. Please therefore retain your receipt as proof of purchase.

If you do experience a problem with your Dimplex product please call the Helpline on **+44 [0]344 879 3588** or visit [https:// www.dimplex.co.uk/support](https://www.dimplex.co.uk/support). For ROI please email serviceireland@glendimplex.com or call **+353(0)1 842 4833**. We will need details of your Dimplex product and a description of the fault which has occurred. Once we receive your information and proof

of purchase we will contact you to make the necessary arrangements. If your Dimplex product is not covered by this Dimplex

Guarantee there may be a charge to repair your product. However, we will contact you for agreement to any charges before any chargeable service is carried out.

What is not covered by a Dimplex Guarantee?

The Dimplex Guarantee does not cover any of the following:

Any fault or damage to your Dimplex product due to faulty materials or workmanship occurring outside the Guarantee Period. Normal wear and tear including parts that might wear out over time or consumables, such as filters.

Any fault or damage occurring to any pre-owned Dimplex product or to any other equipment or property.

Accidental damage to your Dimplex product or damage to your Dimplex product from external sources (for example, transit, weather, electrical outages or power surges).

Fault or damage to your Dimplex product which is:

- Not due to faulty materials or workmanship or which is due to circumstances outside Dimplex's control.
- Caused by use of your Dimplex product for anything other than normal domestic household purposes in the country where it was purchased.

- Caused by any misuse, abuse or negligent use of the Dimplex product, including but not limited to any failure to use it in accordance with the Operating Instructions supplied with the product.
- Caused by any failure to assemble, install clean and maintain your Dimplex product in accordance with the Operating Instructions supplied with the product unless this was carried out by Dimplex or its authorised dealers.
- Caused by repairs or alterations to your Dimplex product not carried out by Dimplex service personnel or its authorised dealer(s).
- Caused by use of any consumables or spare parts for your Dimplex product which are not Dimplex - specified.

Terms and Conditions

The Dimplex Guarantee is valid for 1 calendar year, plus 2 if registered, from the date of purchase of your Dimplex product from a recognised retailer in the country of purchase and use, or the date of delivery of the product if later, always provided the original receipt has been retained and is produced as proof of purchase.

You must provide to Dimplex or its authorised agents on request the original receipt as proof of purchase and - if required by Dimplex - proof of delivery. If you are unable to provide this documentation, you will be required to pay for any repair work required.

Any repair work under the Dimplex Guarantee will be carried out by Dimplex or its authorised dealer(s) and any parts that are replaced will become the property of Dimplex. Any repairs performed under the Dimplex Guarantee will not extend the Guarantee Period.

The Dimplex Guarantee does not entitle you to recovery of any indirect or consequential loss or damage including but not limited to loss or damage to any other property.

The Dimplex Guarantee is in addition to your statutory rights as a consumer and your statutory rights are not affected by this Dimplex Guarantee.

Contact Dimplex

A brand of the Glen Dimplex UK Limited, trading as Glen Dimplex Heating & Ventilation

If you have any questions about what the Dimplex Guarantee covers and does not cover or how to claim under the Dimplex Guarantee, please contact us:

Glen Dimplex Heating & Ventilation, Grange Drive, Hedge End, Southampton SO30 2DF

Telephone: **0344 879 3588** Visit: **www.dimplex.co.uk**

